

PrimeLine Torktummlare T 8218 K T 9253 E/K/VP

Användarmanual



Använd inte denna apparat förrän du har läst dessa instruktioner!
Om den här maskinen byter äger så måste den här manualen följa
med maskinen.

01/2025
Produkt Nr. MGR0.1,
MWR0.1, MTR0.1, MQR0.1

Symbols



Read the instructions.



Warnings are marked with a warning triangle. The text gives information how a dangerous situation can be avoided. Signal words indicate the severity of the danger, if not avoided.



WARNING

means that possible personal injuries, and potentially life-threatening injuries may occur.



WARNING

means that property damage may occur.

Dear Customer

We are pleased that you have chosen a Schulthess dryer.

Your new dryer is the result of many years of development work. The highest quality requirements, both in development and manufacture, guarantee a long lifetime. Its design meets all the demands of modern laundry care and offers you a varied and individual choice of programmes.

Sparing use of energy and short drying times help to ensure that you can use your dryer as economically as possible.

Please read these instructions carefully to enable you to use all the possibilities and advantages of your new dryer. Please note in particular the safety information.

We hope you will be happy with your new Schulthess appliance.

**Your
Schulthess Maschinen AG**

CONTENTS

SAFETY AND SAFETY MEASURES	6
DISPOSAL	9
APPLIANCE DESCRIPTION	10
Control and display panel	11
DRYING	12
Preparing appliance	12
Selecting the programme	12
Starting the programme	12
Skipping to the next programme step	12
Interrupting the programme	13
Programme end	13
Clean the fluff filters	13
Cleaning the air filter	15
Appliance switch-off	15
PROGRAMME OVERVIEW	17
Basic programmes	17
Favourites	18
Proficlean	18
Wetclean	19
SPECIAL PROGRAMMES	20
Proficlean	20
Wetclean	20
PROGRAMME OPTIONS	21
Antibac	21
Extra gentle	21
Reverse +	21
Time preset	21
Drying +	21
Time	21
Express	22

SETTINGS	23
Language (temporary)	23
Settings menu	23
Additional settings	23
PREPAID CARD / WASHMASTER CARD	26
CLEANING AND MAINTENANCE	27
Cleaning the appliance	27
Cleaning the filter holder	27
Cleaning the moisture sensor	27
Emptying for frost protection or transport	28
Self-cleaning	28
PROBLEMS	29
CUSTOMER SERVICE	33
EC-DECLARATION OF CONFORMITY	34

SAFETY AND SAFETY MEASURES



The enclosed instructions contain important information on the installation, use and safety of your dryer.

Keep them in a safe place for other users or subsequent owners.

- Read the instructions carefully before using the appliance.
- Keep the instructions close to the appliance for further reference.

This appliance meets the stringent safety regulations for electrical appliances.

- Follow the safety instructions in the operating and installation instructions.

Use in accordance with the intended purpose

This dryer is intended exclusively for drying textiles in the home.

The appliance can be used by children aged from 8 years and above and adults with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be carried out by children without supervision.

Safety during operation and use

WARNING Risk of electric shock!

- Do not operate an appliance with visible damage.
- Only touch the mains plug with dry hands.
- Only pull on the plug, never on the cable, as this could be damaged.
- Never spray the appliance with water and never use a steam cleaner.

Repairs may only be carried out by trained specialist personnel and defective components may only be replaced with original spare parts from the appliance manufacturer.

Incorrect repairs or third-party spare parts can cause considerable material damage and danger to the user.

Modifications to the appliance are only permitted in consultation with the manufacturer.

- If the mains connection cable is damaged, replace it with the appropriate replacement cable (available from the manufacturer or customer service).
- Always disconnect the power supply before carrying out maintenance work.
- If the appliance is not to be used for a longish period of time, it must be disconnected from the power supply.

WARNING Risk of fire! Risk of contamination! Property and appliance damage!

The appliance contains the environmentally friendly but flammable refrigerant R 290. Improper disposal can lead to fire and contamination.

- Dispose of the appliance properly and do not damage the pipes of the refrigerant circuit.

- Keep naked flames and ignition sources away from the appliance.
- Always keep the air inlet on the dryer clear.

 **WARNING Risk of injury!**

If you climb onto the dryer, it may tip over and cause injury.

- Do not climb onto the appliance.
- Do not sit, lean or support yourself on the loading door or the machine.

Reaching into the rotating drum can cause injury to hands.

- Never reach into the rotating drum.
- Wait until the drum has come to a standstill.

When lifting the dryer, protruding components (e.g. loading door, cover plate) may break off.

- Do not lift the appliance by protruding components.

If a drying cycle is ended prematurely, the temperature and humidity of the laundry can cause burns on contact with the skin.

- Ensure appropriate hand protection.
- Remove the laundry quickly and spread it out so that the heat can be released.

If a puddle of water has formed on the floor near the appliance (broken hose or similar), wipe it dry and rectify the cause (see **PROBLEMS**).

 **WARNING Risk of fire!**

Items containing heat-sensitive substances may ignite when drying.

- Do not dry laundry in the dryer that has been cleaned with industrial chemicals or treated with flammable solvents such as stain removers, white spirit, etc.
- Wash laundry soiled with cooking oil, acetone, alcohol, petrol, paraffin, stain remover, turpentine, wax or wax remover in warm water with an additional amount of detergent before drying.
- Do not dry textiles in the dryer that have been treated with hair remover, nail varnish remover or similar products.
- Do not dry any items in the dryer made of foam rubber (latex foam rubber), shower caps, waterproof textiles, rubberised items or items of clothing or pillows with foam rubber flakes.
- Remove all objects such as lighters and matches.
- Use fabric softener or similar products in accordance with the manufacturer's instructions.

Safety for children

 **WARNING Risk of injury!**

Children can get into life-threatening situations or injure themselves when playing with the dryer.

- Children under the age of 3 should be kept away from the machine unless they are supervised at all times.
- Do not allow children to play in, on or near the dryer.
- Activate the child lock if required.

Children can become trapped in appliances and put their lives in danger.

Make disused appliances unusable:

- Pull out the mains plug.

- Cut the mains cable and remove together with the plug.
- Destroy the door lock.

Children can wrap themselves in packaging/ film and packaging parts while playing or pull them over their heads and suffocate.

- Keep packaging material away from children.

Children can choke on small parts.

- Keep small parts away from children.

Safety during installation

Warning Risk of injury!

When placing the appliance on a plinth, it must be secured in accordance with the installation instructions, otherwise it may tip over or fall.

- Have the appliance installed by a specialist in accordance with the installation instructions.
- Do not connect an appliance with visible damage.
- When installing on top of a washing machine, the dryer must be attached using a tower kit in accordance with the installation instructions.

Observe the following when drying

The appliance may only be operated with fluff filters fitted.

- Never operate the appliance with damaged fluff filters.
- Keep the area around the dryer free of fluff.
- Clean the fluff filters regularly. The heat exchangers can be impaired and destroyed by fluff.
- Only dry clean laundry in the dryer.
- Before starting a programme, ensure

that there are no foreign objects in the drum.

- Keep pets away from the appliance.

A drying cycle should always end with a complete cooling step so that the laundry remains at a temperature that will not damage it.

- If a drying cycle ends prematurely without cooling down, the laundry items must be removed quickly and spread out so that the heat can be released. It should be noted that the temperature and moisture of the laundry can cause burns on contact with the skin. Appropriate hand protection must therefore be provided.

DISPOSAL

Packaging from your new appliance

All packaging materials used are environmentally friendly and reusable. Return the packaging to the specialist dealer or supplier. Dispose of the packaging material properly.

Disposing of your old appliance

Disused electrical and electronic appliances should be collected, recyclable materials recovered and harmful substances (for flammable refrigerant R 290, see safety instructions) disposed of in an environmentally friendly manner. For this reason, an advance disposal fee is levied on every household appliance and charged directly to the end user. This is required by Swiss law.

The advance recycling fee (vRG)


The advance recycling fee is already included in the price of a new appliance.

This contribution is used to finance the current disposal of old appliances. This is why all household appliances can be handed in for disposal free of charge, even if they have not been purchased new.

Your retailer or one of the 400 official SENS collection points will accept used appliances (www.sens.ch or ask your local authority).


An additional fee may be charged for the collection of appliances from households.

APPLIANCE DESCRIPTION

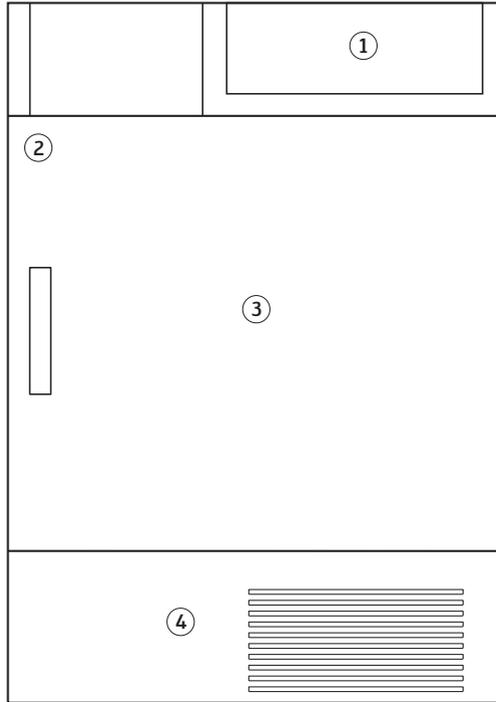

- ① Control and display panel
- ② Type plate (open appliance door, type plate is located at the top on inside of door)
- ③ Loading door
- ④ Plinth cover
- ⑤ Selection buttons

Control and display panel

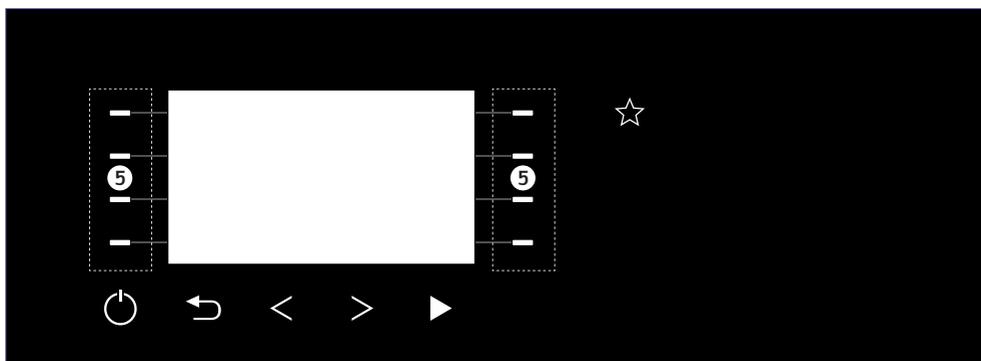

Display and buttons

-  On/Off
-  Back
-  Scroll backwards
-  Scroll forwards
-  Start
-  Language (temporary) / Settings
-  1/3 Page number in programme menu

Additional buttons

-  Favourites

DRYING

Preparing appliance

- Check that the fluff filters have been inserted (see **DRYING / CLEANING THE FLUFF FILTERS**).
- Switch on the power supply.

Appliance switch-on

- Press **ON/OFF**. After starting up, the main menu is displayed.
- Press the **SCROLL FORWARDS** arrow button to call up additional menu pages.

Open the door

- Pull the door handle.

Selecting the programme

- Select the desired programme by pressing the light bar. The programme is displayed with programme duration, maximum load quantity and selectable options.

Selecting the programme option

The options can also be used to adjust the programme to the specifics of the laundry (see **PROGRAMME OPTIONS** chapter).

- Select the desired option(s) by pressing the light bar or the relevant symbol. Selected options are displayed in colour.
- Press again to deselect the option.


Loading laundry

- Ensure that there are no foreign objects (paper clips, coins, nails, etc.) in the drum.
- Place the laundry evenly in the drum.
- Mix large and small laundry items.

Close door

- Press the door shut until you hear the lock click into place.

- Ensure that no laundry items are trapped between the loading door and the fluff filter.

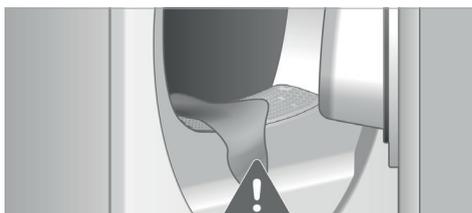

Changing programme before the programme has started

- Press the **BACK** button.
- Select the new programme with the options.

Starting the programme

- Press button **START**.

Prepaid card / washMaster

For appliances with a payment system, the programme will only start after the payment has been debited (see **PREPAID CARD / WASHMASTER**).

Skipping to the next programme step

- Press and hold the light bar next to **FORWARD** until the desired programme step is displayed.

Interrupting the programme

- Press and hold the **ON/OFF** button until **PROGRAMME STOPPED** is displayed.
- Press the light bar next to **STOP** to stop the programme. Press **CONTINUE** to continue the programme.

Cancelling the programme

- Press and hold the light bar next to **CANCEL** until **END** is displayed.
- Remove the laundry immediately after cancelling and spread it out so that the heat can be released.

Self-cleaning

The self-cleaning function at the end of the programme helps extend the service life of the appliance and achieve good drying results over the long term.

- Avoid cancelling programmes frequently so that self-cleaning can take place.

Caution

Risk of appliance damage

- Do not open the door while **SELF-CLEANING** is displayed.

Programme end

The programme end is displayed

When crease protection is switched on, the drum continues to rotate at short intervals at the end of the programme (see **SETTINGS / CREASE PROTECTION**). The door can be opened.

Removing laundry

- Open the door (machine stops automatically)
- Remove the laundry.
- Clean the fluff filters.

Clean the fluff filters


Filter **B** only applies to heat pump dryers!

Fibre abrasion (laundry fluff) is produced when the laundry is used, which is released during drying and collects in the fluff filters in the door opening. Clogged fluff filters can impair the drying process.




- Clean filters **A** and **B** regularly.

Cleaning fluff filter A after each drying cycle

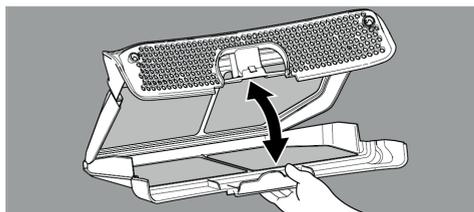

Remove inner filter **A** and flip it open.

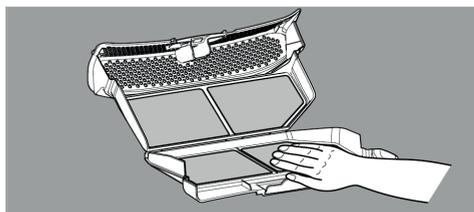


- Run your hand over the inside of the filter to remove the fluff.
- Replace the fluff filter and ensure that it is in the correct position.

Notice


Under certain circumstances, even supposedly well-cleaned fluff filters can become impermeable due to fine, invisible deposits that remain in the filter meshes.

- Pour some water onto the inner surface of the filter. If this inner surface is not permeable, clean the filter with a fine brush under running water.

Clean fluff filter B daily

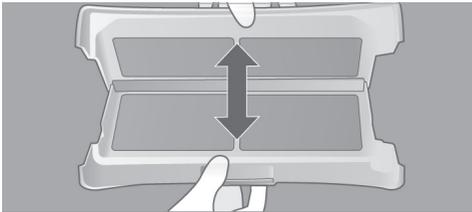

- Remove the outer, coarse filter **B** and flip it open.

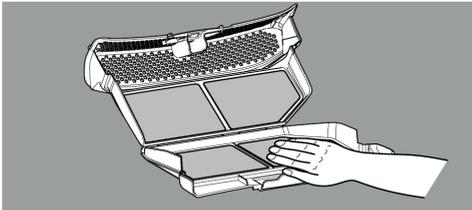

- Run your hand over the inside of the filter to remove the fluff.
- Replace the fluff filter and ensure that it is in the correct position.


Descale fluff filters

If the coating cannot be brushed away, it must be dissolved with a commercially available limescale remover spray.


- Spray limescale remover onto the entire filter surface and allow it to take effect. For stubborn deposits, you can place a layer of household paper on the filter surface and spray it so that the filter is moistened. Leave the limescale remover to work overnight. Then clean the filter under running water with a fine brush.

Clean fluff filter C daily


Filter **c** only applies to heat pump dryers!

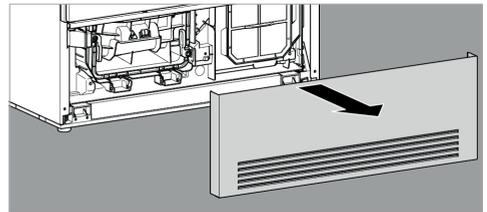


- Open the service flap.

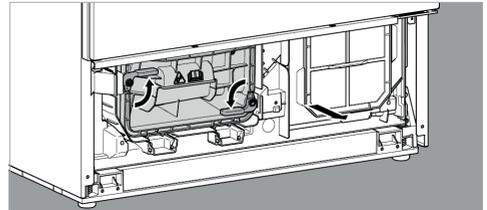

- Turn the blue locking levers towards each other in the direction of the arrow.

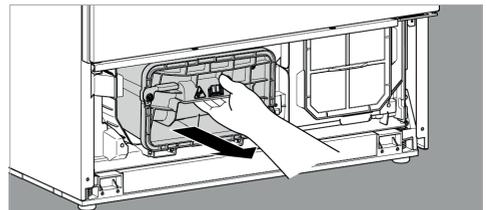

- Pull out filter **c**.

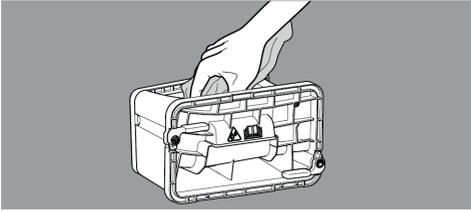


- Remove any fluff that has accumulated on the inside of the filter by hand or with a damp cloth.
- Replace the filter and lock the blue levers again.
- Close the service flap.

Notice


Never operate the dryer with damaged fluff filters!

- Fluff filters are wearing parts and can be ordered as spare parts from customer service.
- The pipes and fins behind filter C are part of the cooling circuit and must not be damaged under any circumstances.


- Remove air filter **D** by pushing it slightly upwards and then pulling it downwards at an angle.

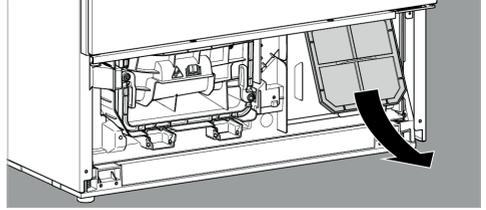

- Run your hand over the air filter to remove the fluff.

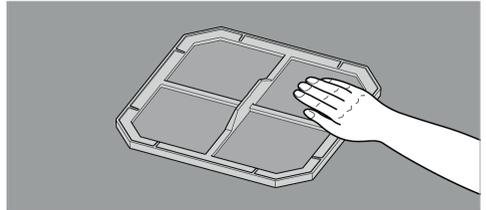

- Replace the air filter and close the ventilation flap.

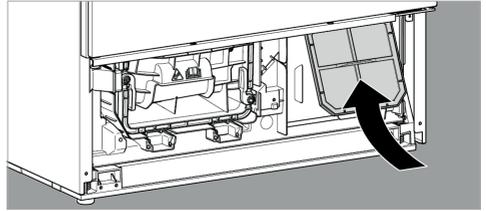


Cleaning the air filter

Only applies to heat pump dryers!

- Remove any fluff and dust that has accumulated on the inside of the ventilation flap by hand or with a damp cloth.

Clean air filter **D** once a week

- Open the ventilation flap.

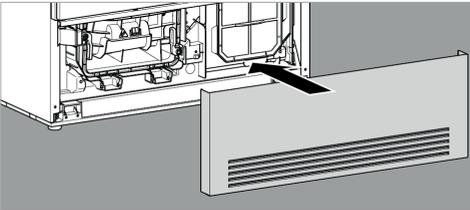


Appliance switch-off

- Press and hold the **ON/OFF** button until the display goes out.
- Disconnect the appliance completely from the power supply if it is not to be used for a long period of time.


Cleaning the air cooler

Only applies to condensation dryers!


Clean the air cooler regularly after approx. 10 drying cycles.

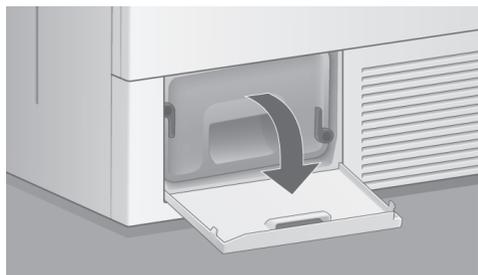


- Open the service flap.

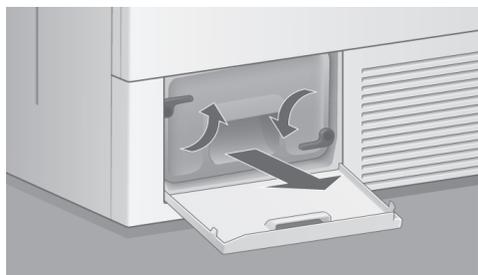


- Unlock the air cooler by turning the blue locking levers inwards.

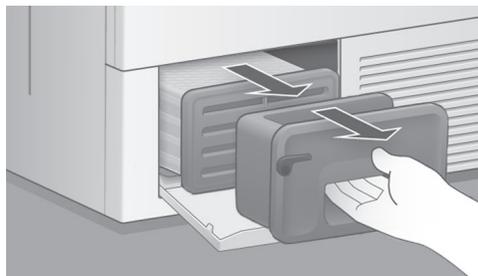


- Remove both parts of the air cooler.

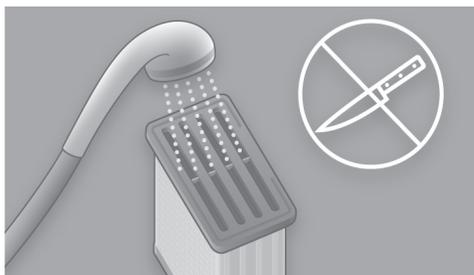

- Rinse the slots of the air cooler from the front side with running water.

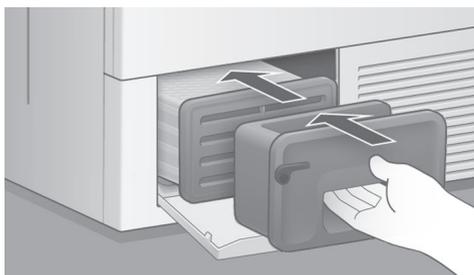

- Let the water drip off and put the air cooler back in place.

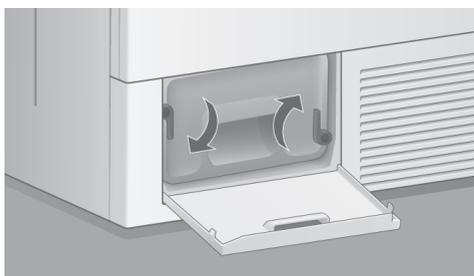

- Turn the locking levers back to the original position.
- Close the service flap.

PROGRAMME OVERVIEW

This overview contains the programmes for all appliance types. You can find the programme and consumption data for your machine on our website in the download center www.podab.se.

 Please always observe the care labelling of textiles

Basic programmes

Cotton Iron damp



Terry towels, tea towels, hand towels, bed linen, underwear, cotton socks

- For laundry which will not be ironed

Cotton Iron damp



Bed and table linen, towels, T-shirts, polo shirts, work wear

- For laundry to be ironed

Cotton Slightly dry



T-shirts, polo shirts, dresses, trousers, work wear, underwear

- Laundry that need not be ironed or need only be lightly ironed

Cotton Cabinet dry



Terry towels, tea towels, hand towels, bed linen, underwear, cotton socks

- For laundry which will not be ironed

Cotton Extra dry



Towelling bathrobes and bed linen (no underwear or socks)

- For particularly thick or multilayered fabrics

Easy care Iron damp



Anoraks, covers

- For laundry to be ironed

Easy care Slightly dry



Shirts, blouses, sportswear, bed and table linen, sweat suits

- Laundry that need not be ironed or need only be lightly ironed

Easy care Cabinet dry



Trousers, dresses, skirts, shirts, blouses, corsetry, leggings, sportswear with a large proportion of synthetic fibres

- For laundry which will not be ironed

Easy care Extra dry



Trousers, dresses, skirts, shirts

- For particularly thick or multilayered fabrics

Time drying



For extra drying time for multilayered textiles (e.g. sleeping bags) or for drying single laundry items, such as terry towelling

- Timed drying warm (10 min – 2 h 30 min)

Reconditioning



The laundry is aired without adding additional temperature

- Timed drying cold (10 min – 1 h 30 min)

Favourites

The six programmes you use most frequently, including the selected options, are saved under the star button. The **TIME PRESET** option is not saved. You can call up, select and start your favourite programmes quickly and conveniently using the star button.

You can also have your saved favourite programmes shown directly on the display when you switch on the appliance (see **SETTINGS / START MENU SELECTION**).

Proficlean

Towelling Extra dry



Towelling, bath towels, bathrobes, etc., made of cotton

Bed linen Cabinet dry



Sheets, fitted sheets, duvet covers, pillowcases, etc., made of cotton

- Button up duvet covers and pillowcases

Down, pillows



Down textiles (e.g. jackets, coats, pillows and light blankets)

- Timed drying warm (50 min – 2 h 30 min)

Shirts, blouses Iron damp



Shirts and blouses (max. 8 garments)

- This programme reduces creasing, is gentle to the laundry and facilitates ironing

Jeans Cabinet dry



Jeans

- Jeans are dried completely

Mixed laundry Cabinet dry



For mixed laundry made of cotton and easy care textiles (e.g. sportswear and towelling)

- Laundry that need not be ironed or need only be lightly ironed

Synthetics Cabinet dry



Silk, delicates, lingerie, curtains, etc.

Silk Cabinet dry



Blouses, shirts, pyjamas

- Remove textiles immediately at the end of the programme, as silk tends to crease

Wool finish Fleece dry



Machine-washable fabrics made from wool or wool blends

Wool seal with the addition "does not felt" or "machine-washable"

- Remove the laundry immediately after the programme has ended and place it on a flat terry towel for drying
- The laundry becomes fluffier, but is not dried

Activewear Cabinet dry



Sports and leisure jackets, weatherwear, ski suits

Impregnating Extra dry



Newly impregnated sports and leisure jackets, weatherwear, ski suits

- Machine drying sets the impregnant
- Dry down, ski jackets and trousers inside out

Wetclean

Wetclean 4.0 Time drying



Outerwear labelled with :

Suits, costumes, jackets, blouses, coats, etc.

- Time drying Wetclean (20 min – 30 min)

PROGRAMME OPTIONS

- By selecting one or more options, a programme can be tailored to the specifics of the laundry.
- Programme options are only active for the duration of the current programme.
- Longer-term adjustments can be made in the settings (**SETTINGS MENU**) and remain active until they are changed again.

Notice

The **ANTIBAC** and **GENTLE PLUS** programme options are mutually exclusive.

Antibac

The **ANTIBAC** option extends the post-drying phase, which can largely kill bacteria.

- Only use **ANTIBAC** on textiles that are not sensitive to temperature.

Extra gentle

For gentle drying of particularly delicate textiles. The temperature is reduced.

Reverse +

By changing the direction of rotation, curling and knotting of the laundry can be avoided and an even drying result ensured.

- Select this option to dry large items of laundry, such as bed linen.

Time preset

- With the **TIME PRESET** option, you can set the start of the programme to a later time and thus adapt it to your individual habits (e.g. to take advantage of the low tariff for night-time electricity).

Notice

Check that the time on the appliance is set correctly (see **SETTINGS / TIME**).

- First select the desired programme.
- Press the light bar next to **TIME PRESET**.
- Input the date and time for the end of the programme by pressing the light bar (15 min increments).
- Confirm input by pressing the light bar next to **OK** and press **START**.
- The preset time begins. The remaining time until the programme starts is displayed.
- Once the preset time has elapsed, the selected programme starts automatically.
- Press the Start button again to cancel the preset time and start the programme immediately.

Drying +

This option can be used to temporarily increase the degree of drying for the duration of the selected programme.

Notice

To increase the degree of drying in general (for all programmes), the **DRYNESS LEVEL RAISED** function must be activated in the settings (see **SETTINGS / DRYNESS LEVEL RAISED**).

Time

When a time-controlled programme is called up, the minimum programme duration is displayed.

- The drying time can be adjusted to the type, quantity and moisture level of the laundry.
- Increase the programme duration by pressing the light bar next to **TIME** (5 min increments).

Express

For drying reduced laundry loads or single items made of cotton, synthetic or mixed fabrics.

SETTINGS

Your dryer has a default factory setting. You can adjust the settings to your individual requirements during initial operation or later. The settings can only be changed if no drying programme is running.

Notice

Certain settings on your machine can be locked. However, the **LANGUAGE** (temporary), **DATE** and **TIME** functions are always available.

Language (temporary)

A second language can be selected temporarily via the **LANGUAGE** menu.

- Tap the light bar next to the speech bubble. The **LANGUAGE** menu is displayed.
- Select the desired language.

ADDITIONAL MENU PAGES can be opened by pressing the **ARROW BUTTONS**.

Pressing the button **BACK** in the menu ends the menu **LANGUAGE**.

Notice

This language will remain active until the machine is switched off or goes into standby.

Settings menu

You can find the individual factory settings for your machine in the consumption data in our download center.

The settings described below are not available for every appliance.

Change settings

- Press the light bar next to the **SETTINGS** symbol. Or
- Press and hold the light bar next to the **SPEECH BUBBLE SYMBOL** until the Settings menu is displayed.
- Select **SETTINGS** by pressing the light bar. The **SETTINGS** menu is displayed.
- Select the desired setting. **ADDITIONAL MENU PAGES** can be opened by pressing the **ARROW BUTTONS**.

Save changes

Press the **BACK** button (or no later than two minutes after the last input) to exit the **SETTINGS** menu.

Any changes made must be confirmed when exiting the menu.

Additional settings

The settings described below are not available for every appliance.

Language

- **German**
-

The **ARROW** buttons can be pressed to call up additional menu pages.

- Select the desired language by pressing the light bar.

Date (factory-set)

The date can be set by pressing the light bar (press and hold for fast scrolling).

Confirm input by pressing the light bar at **OK**.

Time (factory-set)

The time can be set by pressing the light bar (press and hold for fast scrolling).

Confirm input by pressing the light bar at **OK**.


CLEANING AND MAINTENANCE

Warning Risk of electric shock!


- Switch off the power supply to the machine before starting cleaning.
- Never spray the appliance with water.
- Do not use a steam cleaner.

Notice

Solvents can damage appliance parts, develop toxic vapours and are explosive. Do not use cleaning agents containing solvents.

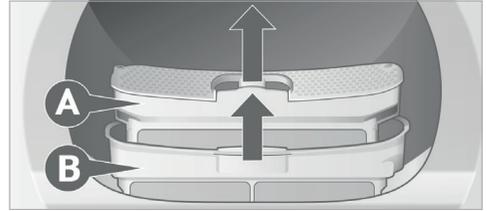


- Remove the fluff filter(s).

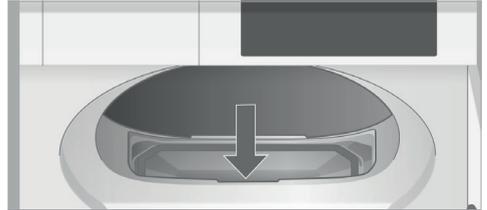

- Run the pipe of the vacuum cleaner or the brush around the well of the filter.
- Remove any residual fluff.
- Replace the fluff filters.

Cleaning the moisture sensor

After longer operation, small deposits (lime, fabric refiner) can form on the front inner side of the drum on both sides of the longish moisture sensors. With moisture controlled programmes, this can result in the desired level of dryness not being reached.

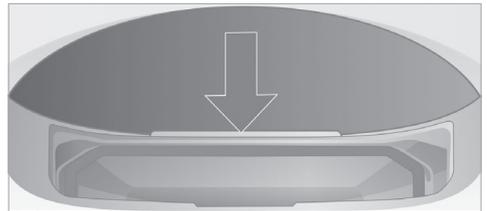

- Wipe deposits away with a cloth soaked in vinegar.

Cleaning the appliance

- Do not use abrasive cleaning agents.
- Never scratch or scrape with sharp objects.
- Clean the housing and control panel with soapy water or a solvent-free, non-abrasive cleaning agent.

Notice

- Never use steel wool!

Clean the fluff filters

See **DRYING / CLEANING THE FLUFF FILTERS**.

Cleaning the air cooler

See **DRYING / CLEANING THE AIR FILTERS**.

Cleaning the filter holder

Filter **B** only applies to heat pump dryers!

From time to time it is necessary to remove any fluff that has accumulated inside the filter holder. To do so, use a vacuum cleaner or a cleaning brush.

Emptying for frost protection or transport

If the dryer is in a room susceptible to frost or is to be transported, it must be completely emptied.

- Start any programme.
- Press the light bar next to **FORWARD** repeatedly until **SELF-CLEANING** is displayed.
- Allow the programme to finish (without crease protection).

Self-cleaning

The dryer is equipped with an automatic self-cleaning function.

At the end of each programme and also during the drying process, if necessary, the heat exchanger is cleaned.

A slight knocking noise can be heard during the cleaning process and the self-cleaning symbol is displayed.

Carry out self-cleaning manually

If you use the appliance rarely or only dry small amounts of washing, it is recommended that manual self-cleaning be carried out from time to time:

- Pull the fluff filters **A** and **B** out of the filter holder (see **CLEANING AND MAINTENANCE / CLEANING THE FILTER HOLDER**).
- Pour 1.5 l tap water into the opening of the filter holder.
- Replace the fluff filters.
- Start the **COTTON CABINET DRY** programme.
- Press the **FORWARD** light bar several times until **SELF-CLEANING** appears in the display.
- Allow the programme to finish (without crease protection).

PROBLEMS



Warning

Improper repairs can result in serious accidents, damage and operation malfunctions!

Do not make any changes, manipulations or attempt repairs using tools such as screwdrivers, etc.

ERROR MESSAGES

Child lock active

- Hold the bar in the upper right (**is not lit!**) and at the same time press the desired button.

Check drain

- Condensate water pump is not running.
- Check if the water discharge hose is bent or the on-site water discharge is clogged. After rectifying the error, the programme can be continued from the point at which it was interrupted.
 - Press the light bar next to **CONTINUE**.

Close door

- The start button has been operated before the door has been closed.
- Close the door and press **START**.

Clean the fluff filters

Display while programme is running

- Open the door.
- Clean the fluff filters (see **DRYING / CLEANING THE FLUFF FILTERS**).
- Close the door and press the light bar next to **CONTINUE**.

Display after the programme ends

- Acknowledge the error message by pressing the light bar next to **OK**.
- Clean the fluff filters (see **DRYING / CLEANING THE FLUFF FILTERS**).
- If the error message is displayed again, contact customer service.

Clean filter «C»

- Clean the fluff filter **C** behind the service flap (see **DRYING / CLEANING THE FLUFF FILTERS**).
- Close the service flap and press the light bar next to **OK**.

Insert filter «C»

Display at the start

- Ensure the fluff filter **C** is placed correctly behind the service flap.
- Press **START**.

Display while programme is running

- Ensure the fluff filter **C** is placed correctly behind the service flap.
- Press the light bar next to **CONTINUE**.

Error door lock

- Wait for the programme to end.
- Open the door
- If the door cannot be opened after the programme has ended, contact customer service.

Programme stopped

- Button **ON/OFF** was pressed during a running programme.
- Press the light bar next to **CONTINUE**.

**ERROR MESSAGES
PREPAID CARD / WASHMASTER CARD**

Turn card	<ul style="list-style-type: none">• Turn the card over.
Not enough balance	There is not enough credit on the card.
Insert different user card	<ul style="list-style-type: none">• Use a card which has credit
Wrong user number or card type	This card is not valid. <ul style="list-style-type: none">• Please contact the person in charge.
Cannot read card	This card cannot be read. <ul style="list-style-type: none">• Try inserting the card again or contact the person in charge.
Wrong laundry room number	This user card is not valid for this laundry room.
Please insert the card again	The card could not be read. <ul style="list-style-type: none">• Please insert the card again
Card balance almost used up	The credit on this card is sufficient only for the drying programme you have selected.

MACHINE OPERATION

Machine does not start when pressing the On/Off button

- Check whether the mains power is switched on (wall / plug).
- Check whether all the fuses are intact or the safety switch has tripped.

Mains blocking (usually at noon).

- Operate the appliance after the mains blocking has ended.

-
- If the dryer does not start despite correct power supply, contact customer service.

The dryer does not start

- Press button **START**.
- If the programme does not start despite pressing the start button, contact customer service.

Notice

When time preset is activated, the programme starts only at the pre-selected time.

The drying target was not achieved

When warm, laundry feels moister than it actually is.

- Remove the laundry from the dryer and let it cool.

When still moist:

- Clean the fluff filters (see **DRYING / CLEANING THE FLUFF FILTERS**).
- Increase degree of drying (see **SETTINGS / DRYNESS LEVEL RAISED**).
- Clean the moisture sensor (see **CLEANING AND MAINTENANCE / CLEANING THE MOISTURE SENSOR**).

The individual laundry piece does not reach the set drying target

- If one single piece is to be dried in the dryer, it will be dried more evenly by adding additional pieces, e.g. two terry towels or using the **EXPRESS** programme option.

The drying takes too long

The fluff filters are blocked with fluff or lime deposits.

- Clean the fluff filters (see **DRYING / CLEANING THE FLUFF FILTERS**).

Power failure.

- Note lock times of EW.

The laundry is not dry after the maximum possible settings

Drum is overloaded.

- Observe the maximum loads in the programme table.

The room does not have sufficient ventilation.

- Open a window or door.

The fluff filters are blocked with fluff or lime deposits.

- Clean the fluff filters (see **DRYING / CLEANING THE FLUFF FILTERS**).

Laundry gets tangled

- Select the special programme «Bed linen» or «Terry towels»..
- Use the **REVERSE +** programme option.

Dampness in the room increases significantly

The room does not have sufficient ventilation.

- Ensure adequate ventilation.

Water on the floor

- Check the drain hose for leakage and proper installation.

Odour accumulation

If the appliance is used only rarely or only for small amounts of washing (e.g. in a holiday apartment), fluff can collect in the drainage system (see **CLEANING AND MAINTENANCE / SELF-CLEANING**).

ERROR MESSAGES F--**«Error F --» is displayed**

- Acknowledge the error message by pressing the light bar next to **OK**. Machine restarts.
 - Select a programme again and press button **START**.
-

«Error F --» is displayed again despite programme restart

- Acknowledge the error message by pressing the light bar next to **OK**.
 - Interrupt the power supply for one minute (switch the main switch off and on again). As soon as the display lights up, the appliance is again ready to operate.
 - Select a programme again and press button **START**.
-

«Error F --» is displayed again after interruption of the power supply

- Note the error message.
 - Switch off the power supply.
 - Contact customer service (see **CUSTOMER SERVICE**).
-

CUSTOMER SERVICE

AB PODAB produces washing machines and dryers of outstanding quality with a proverbially long service life. It is for this reason that PODAB carefully selects, tests and assembles parts, components and materials.

Should error messages or faults nevertheless occur, you will find lots of helpful information online at www.podab.se, such as detailed operating instructions, tips and tricks as well as answers to the most frequently asked questions (FAQ).

Our service number 031-752 01 70 can be contacted from Monday to Friday, 07:30 to 12:00 and 12:30 to 16:30.

Please make a note of error message F -- as well as the product and appliance number. You will find these numbers on the type plate on the inside of the appliance door.

**EG-KONFORMITÄTSERKLÄRUNG
EC-DECLARATION OF CONFORMITY
CE-DÉCLARATION DE CONFORMITÉ
CE-DICHIARAZIONE DI CONFORMITÀ**

No. 699067

Wir erklären in alleiniger Verantwortung, dass das elektrotechnische Erzeugnis
We declare under our sole responsibility that the electrical product
Nous déclarons sous notre seule responsabilité que le produit électroménager
Noi dichiariamo sotto la nostra esclusiva responsabilità che l'apparecchio elettrico

Trockner / Dryer / Sèche-linge / Asciugatrice **WT24-X-6X XXX.DXX.AX.HXX.LX.00**

auf das sich diese Erklärung bezieht, mit den folgenden Normen übereinstimmt:
to which this declaration relates is in conformity with the following standards:
auquel se réfère cette déclaration est conforme aux normes :
al quale si riferisce la presente dichiarazione é conforme alle norme:

EN 50570:2013 +A1:2018
EN 60335-1:2012 +A11:2014 +A13:2017 +A14:2019 +A15:2021
EN 60335-2-11:2010 +A11:2012 +A1:2015, +A2:2018
EN 55014-1:2021, EN 55014-1:2017+A11:2020
EN 55014-2:2021, EN 55014-2:2015, EN 55014-2:1997 +A1:2001 +A2:2008
EN 61000-3-2:2019 +A1:2021, EN 61000-3-3:2013 +A1:2019 +A2:2021 +AC:2022
EN61000-4-13:2002 +A1:2002 +A2:2016
EN 61000-6-2:2019, EN 61000-6-3:2021, EN 61000-6-3:2007 +A1:2011
EN 62233:2008 +AC:2008

gemäss den Bestimmungen folgender Richtlinien
following the provisions of Directives
conformément aux disposition des Directives
conformemente alle disposizioni e Direttive

2014/30/EU Directive relating to electromagnetic compatibility
2014/54/EU Radio Equipment Directive (RED)
2006/42/EC Machinery Directive

Wolfhausen, 25-07-2024

Hersteller / Manufacturer / Fabricant / Il produttore

Schulthess Maschinen AG
Landstrasse 37
CH-8633 Wolfhausen

Thomas Marder Digital unterschrieben
von Thomas Marder
Datum: 2024.07.31
16:56:25 +02'00'

Thomas Marder
CEO

Verantwortlich für die technische Dokumentation ist:
Responsible for the technical documentation is:
Responsable pour le documentation technique est:
Il responsabile della documentazione tecnica è:

Gianfranco Di Natale Digital unterschrieben
von Gianfranco Di Natale
Datum: 2024.07.30
10:01:59 +02'00'

Gianfranco Di Natale
Head of Laundry Technology



AB PODAB

Tel: 031-752 01 00

E-mail: salj@podab.com

Service e-mail: support@podab.com

www.podab.se

© 2025 AB PODAB

Vi förbehåller oss rätten att göra ändringar
och reserverar oss för eventuella tryckfel.

För miljöns skull trycker vi endast i mycket begrän-
sad omfattning. Du kan hitta fler dokument och
information om dina maskiner i informationsområdet
för dina maskiner på www.podab.se